 


THE
RABBIT
COMPANY™

OVERVIEW

All products by **The Rabbit Company™** are made from soft, smooth, body safe materials. Our easy to use interface allows users to easily find the right stimulation and intensity. Get ready for sensual satisfaction that can not be matched and will have you craving for more.

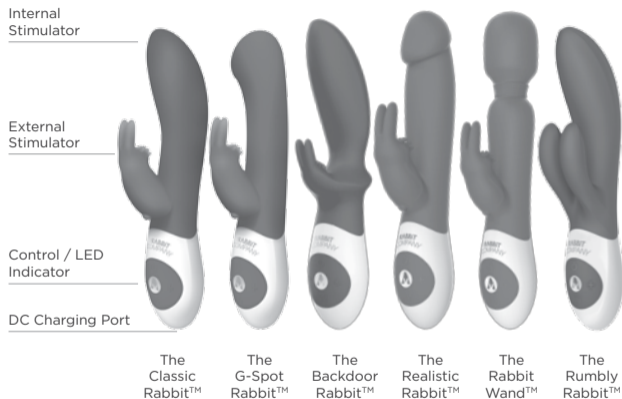

Internal Stimulator/

Come Hither Shaft
Rotating Beads
Rotating Beads
Backdoor Beads
Flutter Tips

External
Stimulator

Control / LED
Indicator

DC Charging Port



The
Come Hither
Rabbit™

The
Rotating
Rabbit™

The
Beaded
Rabbit™

The
Beaded
Backdoor
Rabbit™

The
Flutter
Rabbit™

Internal
Stimulator

External
Stimulator /
Clitoris
Suction
Function

Control / LED
Indicator

DC Charging
Port



The
Kissing
Rabbit™

The
Beaded D.P.
Rabbit™

 
The
Thrusting
Rabbit™

The
Thumper
Rabbit™

The
Sonic
Rabbit™

GETTING STARTED

1. Before first use, charge your rabbit for approximately 2.5 hours. The USB charging cable can be plugged into any USB port or USB / AC power adapter (not included).

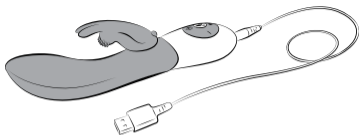

- Flashing Light = Charging
- Solid Light = Fully Charged
- Rapid Flashing Light = Low battery, charge is needed

 
2. Wash your rabbit with soap and water, or toy cleaner suitable for use with silicone items.



3. Lubricate your rabbit (if needed) with a water based, silicone compatible lubricant.





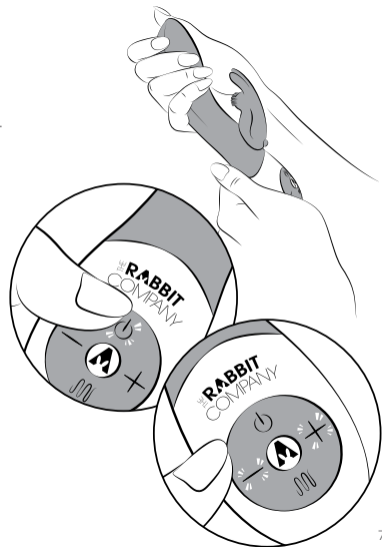










4. Turn ON your rabbit by pressing 



 
5. To change the vibration intensity, and/or rotation speed press and release + and -





FAQs can be found at
www.TheRabbitCompany.com

Email us at
customer@TheRabbitCompany.com
for any unanswered questions

  6. To change the mode in the shaft press and release , , , , or  depending on the model. Holding either , , , , or  for 3 seconds will independently turn OFF the vibration, rotation and / or thrust. Once OFF, a single push of , , , , or  will turn the vibration, rotation, and / or thrust back ON.





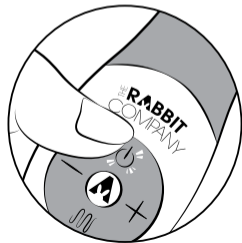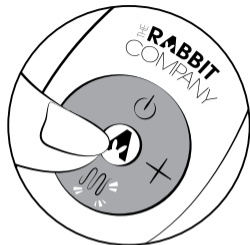




7. To change the vibration pattern in the rabbit press and release . Holding the  button for 3 seconds will independently turn OFF the vibration. Once OFF, a single push of the  will turn the vibration back ON.


8. To power OFF your rabbit press the  button.



CONTROLLING YOUR RABBIT

The Classic Rabbit™	The Backdoor Rabbit™
The G-Spot Rabbit™	The Realistic Rabbit™
The Rabbit Wand™	The Kissing Rabbit™
The Thumper Rabbit™	The Flutter Rabbit™
The Rumbly Rabbit™	

 - To turn the item ON / OFF press and release 
- Press and release  to increase vibration intensity
- Press and release  to decrease vibration intensity
- To change the independent vibrator in the shaft press and release 
- Holding  for 3 seconds will turn OFF the independent shaft vibrator, pressing and releasing  will turn the shaft back ON
- To change the individual vibrator in the rabbit, press and release 
- Holding  for 3 seconds will turn OFF the independent rabbit vibrator. Pressing and releasing  will turn it back ON

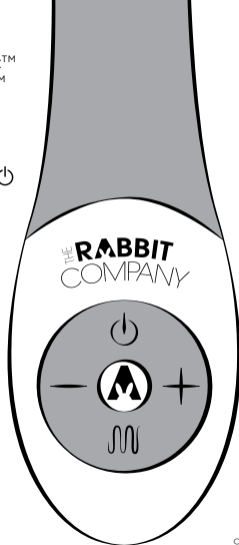

CONTROLLING YOUR RABBIT

The Come Hither Rabbit™





 

The Thrusting Rabbit™

The Sonic Rabbit™



• To turn the item ON / OFF press and release 


• Press and release **+** to increase shaft rotation / “come hither motion” speed, vibration intensity or thrusting speed

• Press and release **-** to decrease shaft rotation / “come hither motion” speed, vibration intensity or thrusting speed

• Holding , , or  for 3 seconds will turn OFF the independent shaft, pressing and releasing , , or  will turn it back ON

• To change the individual vibrating pattern in the rabbit, press and release 

 • Holding  for 3 seconds will turn OFF the independent rabbit vibrator. Pressing and releasing  will turn it back ON

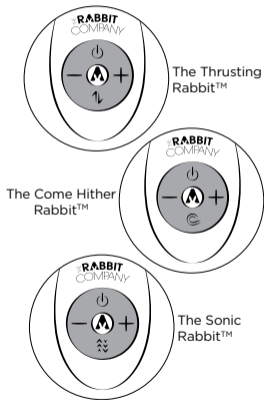

CONTROLLING YOUR RABBIT

The Rotating Rabbit™

The Beaded Rabbit™



The Beaded Backdoor Rabbit™


The Beaded D.P. Rabbit™



• To turn the rabbit ON / OFF press and release 

 
• Press and release **+** to increase rotation speed of the beads

• Press and release **-** to decrease rotation speed of the beads

• Holding  for 3 seconds will turn off the independent shaft / beads, pressing and releasing  will turn the shaft / beads back ON


• To change the individual vibrating  pattern in the rabbit, press and release

• Holding  for 3 seconds will turn OFF the independent rabbit vibrator. Pressing and releasing  will turn it back ON

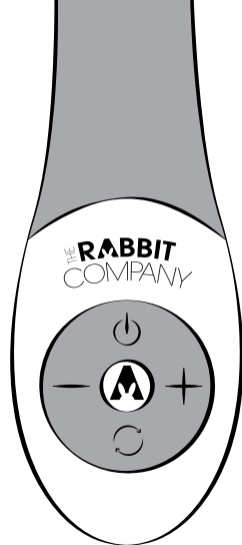

CHARGING

 - Insert the charging plug into the designated charging area
- Flashing light indicates item is charging
- Solid light indicates item is fully charged
- Rabbits require approximately 2.5 hours for full charge

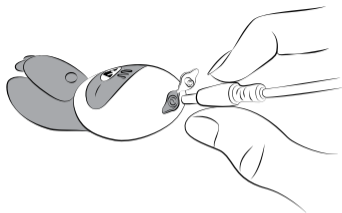

Flashing light = Charging

 


Solid light = Fully Charged



TRAVEL LOCK

- All rabbit items include travel lock for safe and convenient travel
- While the rabbit is powered OFF, simultaneously press and hold the + and - buttons for 3 seconds. Flashing light will indicate the item is locked
- To unlock simply press and hold the + and - again for 3 seconds. Flashing light will indicate lock is disabled

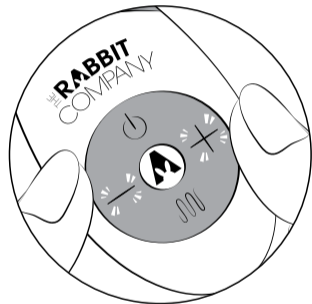

SPECIFICATIONS

	Internal Stimulators	External Stimulators	Internal Rotations	External Rotations
The Classic Rabbit™	6	6	-	-
The G-Spot Rabbit™	6	6	-	-
The Backdoor Rabbit™	6	4	-	-
The Realistic Rabbit™	6	6	-	-
The Rabbit Wand™	6	6	-	-
The Come Hither Rabbit™	-	-	5	6
The Rotating Rabbit™	-	-	5	6
The Beaded Rabbit™	-	-	5	6
The Beaded Backdoor Rabbit™	-	-	6	6
The Kissing Rabbit™	6	6	-	-

	Internal Stimulators	External Stimulators	Internal Rotations	External Rotations
The Beaded D.P. Rabbit™	-	-	5	6
The Thrusting Rabbit™	-	-	5	6
The Thumper Rabbit™	-	-	3	6
The Sonic Rabbit™	4	6	-	-
The Flutter Rabbit™	6	6	-	-
The Rumbly Rabbit™	6	15	-	-
The Classic Rabbit XL™	6	6	-	-
The Beaded Rabbit XL™	-	-	5	6
The Realistic Rabbit XL™	6	6	-	-
The Come Hither Rabbit XL™	-	-	5	6

 
HARE CARE™

Cleaning, Storage & Safety

1. Always clean your Rabbit thoroughly before and after each use.

2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended and can cause damage to the product. Never use hand cream, or massage oils as lubricants for your intimate areas.



3. To properly clean your rabbit, use a suitable silicone-compatible toy cleanser. If this is not available, wash the silicone area of your rabbit with luke-warm water and an antibacterial soap. Rinse clean and pat dry using a lint-free cloth or towel. Do not use cleaners containing alcohol, petrol or acetone.

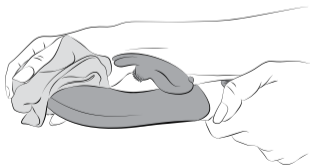

4. Avoid leaving your rabbit in direct sunlight and never expose it to extreme heat.

5. Our products are designed to be splash-proof. Never immerse your rabbit in water.

  If your rabbit appears to function abnormally, turn OFF and consult our customer care section on **TheRabbitCompany.com** where you will find help tips. Should you require further assistance please contact: **customercare@TheRabbitCompany.com**

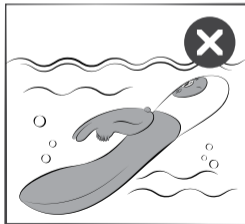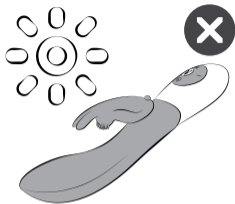

SPECIFICATIONS

	Size	Weight	Use Time	Modes	Battery		Size	Weight	Use Time	Modes	Battery
The Classic Rabbit™	205 x 42 x 58 mm	180 g	2 hours	12	750m-Ah	The Beaded D.P. Rabbit™	215 x 42 x 96 mm	263 g	1 hour	11	750m-Ah
The G-Spot Rabbit™	202 x 42 x 57 mm	170 g	2 hours	12	750m-Ah	The Thrusting Rabbit™	220 x 42 x 64 mm	240 g	1 hour	12	750m-Ah
The Backdoor Rabbit™	198 x 42 x 70 mm	185 g	2 hours	12	750m-Ah	The Thumper Rabbit™	205 x 42 x 58 mm	186 g	1 hour	9	750m-Ah
The Realistic Rabbit™	213 x 42 x 63 mm	214 g	1 hour	12	750m-Ah	The Sonic Rabbit™	246 x 49 x 76 mm	427 g	1 hour	10	860m-Ah
The Rabbit Wand™	224 x 42 x 64 mm	215 g	1 hour	12	750m-Ah	The Flutter Rabbit™	197 x 42 x 64 mm	164 g	1 hour	12	750m-Ah
The Come Hither Rabbit™	205 x 42 x 58 mm	198 g	1 hour	11	750m-Ah	The Rumbly Rabbit™	195 x 47 x 58 mm	210 g	1 hour	12	750m-Ah
The Rotating Rabbit™	202 x 42 x 56 mm	212 g	1 hour	11	750m-Ah	The Classic Rabbit XL™	238 x 49 x 76 mm	298 g	1 hour	11	750m-Ah
The Beaded Rabbit™	215 x 42 x 57 mm	220 g	1 hour	11	750m-Ah	The Beaded Rabbit XL™	248 x 49 x 76 mm	405 g	1 hour	11	750m-Ah
The Beaded Backdoor Rabbit™	217 x 42 x 70 mm	218 g	1 hour	12	750m-Ah	The Realistic Rabbit XL™	250 x 49 x 76 mm	298 g	1 hour	11	2200m-Ah
The Kissing Rabbit™	200 x 42 x 76.5 mm	196 g	1.5 hours	12	750m-Ah	The Come Hither Rabbit XL™	238 x 49 x 76 mm	308 g	1 hour	11	750m-Ah

SPECIFICATIONS

Materials	Body Safe Abs / Silicone
Charging	2.5 hours
Max Noise Level	< 68 dB
Interface	5 Button Interface

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.



RoHS



Designed and Developed by
The Rabbit Company™

Complete user instructions in additional
languages can be found at:

www.TheRabbitCompany.com

Sold as a novelty only. Made and packed in China. All rights reserved. The shape and appearance of the products in this guide are a trademark and trade dress of B.C.B.V.I © B.C.B.V.I

Visit www.trcpatents.com for more info.

Warning: This product is for adults only. To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen or inflamed areas, or skin lacerations. No medical claims are warranted or implied by the use of this product.

Made in China
© **The Rabbit Company™**

FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions

TheRabbitCompany.com